





M.D. ENTERPRISES  
9017 DIPLOMACY ROW DALLAS, TX 75247  
214-350-5765

---

# LIGHTING

## ATTACHING CORD END TO TRACK

1. On one side of the track there is an indented line, which is on the bottom (see photo below). Face the track with that line towards you (You should be able to read the caution label on the inside).
2. Unscrew the cap on the **left** end of the track and remove. With the black side of the cord end facing up, insert it into the open end of the track. Tighten the screw to hold in place.

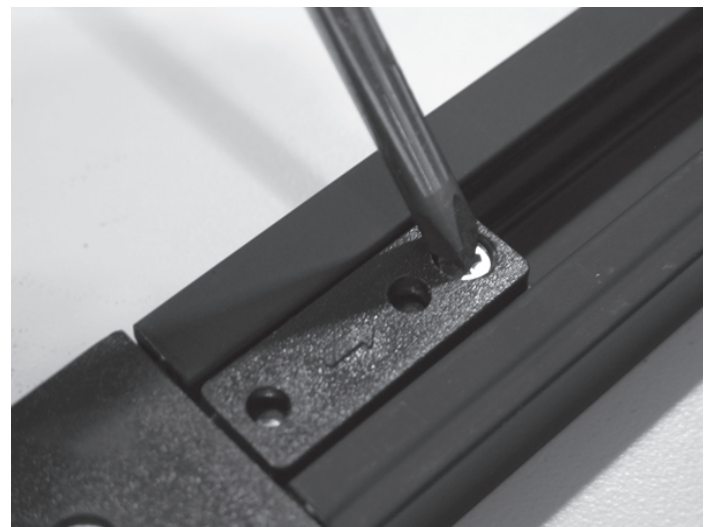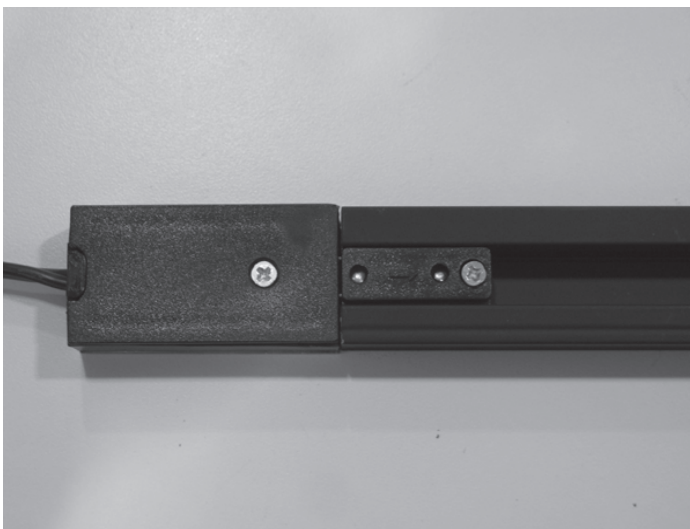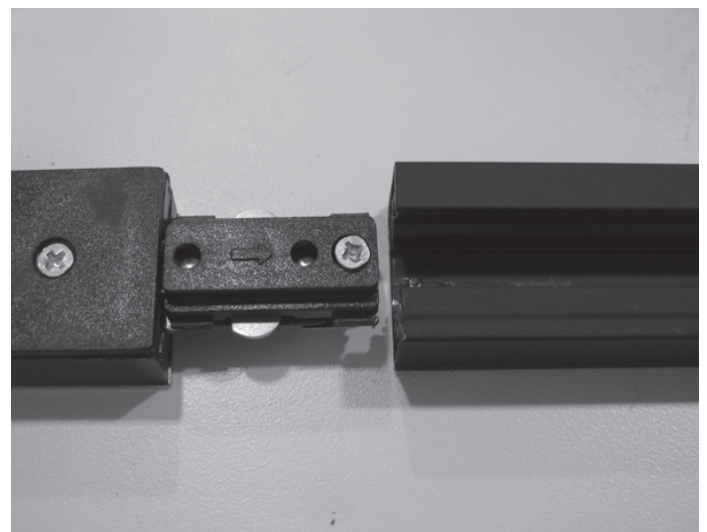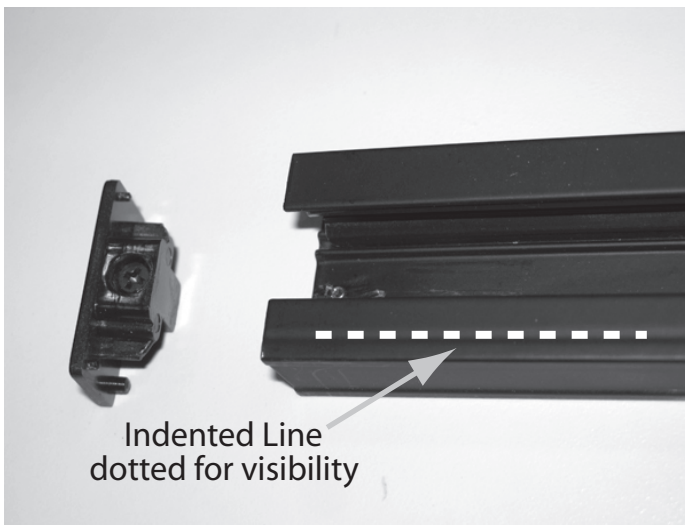

M.D. ENTERPRISES  
9017 DIPLOMACY ROW DALLAS, TX 75247  
214-350-5765

---

# LIGHTING

## ATTACHING FIXTURES TO TRACK

1. On the base of the fixture (the part that attaches into the track) there are two metal prongs facing one direction and one metal prong facing the other direction. Insert the fixture into the track and turn 90 degrees so that the side with two prongs turns towards the bottom (side with indented line). Do not slide the fixture in from the end. Place the fixture in the spot you want it to go. Bulb simply screws into fixture.
3. To remove fixture pull collar away from track and turn 90 degrees in either direction.

